



# Canon Vixia HF R70 SD Card Replacement

Replace an old SD card for a new one for your camcorder.

Written By: Thomas Rogienski



## INTRODUCTION

This guide will aid you in removing and replacing your SD Card.

## Step 1 — SD Card



- Open the screen compartment.
- Position the camcorder so that the screen is facing you.

## Step 2



- Find the SD card compartment.
- Place your finger under the slot and gently slide it forward to open the compartment.



## Step 3



- Gently push on the SD card until you hear a "click". The SD card should pop out.
- Remove the old SD card by pulling it out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 07:55:42 AM.